
Portable Stove

TRAL09

- OUTDOOR USE
 - GAS
-

IMPORTANT: READ THESE INSTRUCTIONS FOR USE CAREFULLY SO AS TO FAMILIARIZE YOURSELF WITH THE STOVE BEFORE CONNECTING IT TO ITS GAS CONTAINER. KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

Specifications

Model Item:	TRAL09
Dimensions:	55mm x 75mm x 32mm
Weight:	90g
Rate	250 g/h /3.5kw
Ignition:	None
Gas cartridge:	230G butane-propane mixture cartridge.

Type of gas container:

This stove shall only be used with the 230g butane-propane mixture cartridge. It may be hazardous to attempt to fit other types of gas cartridge.

Gas consumption and heat input were measured and calculated in accordance with in-house testing methods.



Safety information

CAUTION: Use only in a well ventilated area.

- 1 Check that seals are in place and in good condition before connecting to the gas cartridge.
- 2 Do not use the stove if it has damaged or worn seals. Do not use the stove if it is leaking, damaged or which does not operate properly.
- 3 This stove is for outdoor use only. Never use it inside tents, in enclosed spaces, or inside vehicles. Because it consumes large amounts of oxygen, its use in enclosed spaces may lead to carbon monoxide poisoning or fire, making use there extremely dangerous.
- 4 This stove must be operated on a horizontal surface.
- 5 Keep all combustibles at least 1M away from the top and 1M away from the sides of the stove.

- 6 A small amount of gas may escape when attaching or detaching the gas cartridge. So never do so where there is danger of fire or in a confined space with poor ventilation. Keep away from any sources of ignition, such as naked flames, pilots, electric fires and away from other people.
- 7 If there is a leak on your stove (smell of gas), take it outside immediately into a well ventilated flame free location where the leak may be detected and stopped. If you wish to check for leaks on your stove, do it outside. Do not try to detect leaks using a flame, use soapy water.

User manual

CAUTION: Accessible parts may become very hot. Keep young children away from the stove.

WARNING: After use, inspect and clean the stove before putting it in its case for storage. Because moisture, dust or debris adhering to the stove may cause clogging or rust, giving rise to accidents. So inspect and clean the stove before storing it to avoid problems when using it the next time.

Assembly information

- 1 Viewing the gas cartridge connecting portion, revolve in a counterclockwise direction and detach the stove from the main body.
- 2 Viewing the flame adjustment control from the front, revolve it clockwise until it stops, and then check to make sure that the collar assembly is completely shut.
- 3 Hold the gas cartridge and the stove upright and carefully fit the threaded section on the bottom of the stove into the threaded top of the gas cartridge. Revolve clockwise (when viewed from the bottom of the cartridge) until it stops naturally, and then tighten firmly, but do not over-tighten.

Operation instructions

- 1 Use a fire or a match to light the flame in advance and then revolve the flame control slowly in a counter-clockwise direction. If the stove does not light, shut the flame adjustment control completely off and start the lighting process over again from the beginning.
- 2 Adjusting the flame: Revolve the flame control slowly in a counter clockwise direction (left revolution) for a larger flame and clockwise for a smaller flame. Revolve the flame control slowly.
- 3 Accessible parts may become very hot when the stove is using.
- 4 Hold the stove and the gas cartridge in an upright position, and detach the gas cartridge by revolving it in the opposite direction to that for attaching it.

- 5 Extinguishing the stove: Revolve the flame control slowly clockwise right revolution) until it stops, and then check to make sure that the flame is completely extinguished. When replacing the gas cartridge, extinguish the flame and wait until the stove has cooled down sufficiently.

Replacing gas cartridge

INFORMATION

- 1 Check that the cartridge is empty before replacing it (shake to hear the noise made by the liquid).
- 2 Check that burners are extinguished before disconnecting the gas cartridge.
- 3 Revolve the flame control slowly clockwise (right revolution) until it stops, and then check to make sure that the flame is completely extinguished. When replacing the fuel canister, extinguish the flame and wait until the stove has cooled down sufficiently.

- 4 Check the seals before connecting a new gas container to the stove.

- 5 Change the gas cartridge outside and away from people.
- 6 Always mount gas container with the stove in an upright position, and do not over-tighten.
- 7 A small amount of gas may escape when attaching or detaching the gas container, so never do so where there is danger of fire or in a confined space with poor ventilation.

Inspection and care

- 1 Carry out regular periodic inspections.
- 2 Check to make sure that the stove is operation properly before use.
- 3 If the stove head gets dirty, wipe it with a clean cloth.
- 4 Never use the stove if it is damaged or there is any sign of dysfunction.
- 5 DO NOT MODIFY THE STOVE ON YOUR OWN. Make sure to return the stove to your dealer or to Trakker for carrying out repairs.

After service and repairs

Trakker makes every effort to ensure that all products operate properly, so if a product is found to be defective, contact the retailer where you purchased the product or Trakker Products. If it is determined that the cause was a production defect, the product will be repaired or replaced free of charge. Otherwise, it will be repaired at a reasonable charge. Please note that it may not be possible to repair a product under improper use, negligence, product modification or accident.